

WAARSCHUWING / WARNING
SCHAKEL SPANNING UIT VOOR INSTALLATIE EN INSPECTIE
SWITCH OFF THE MAINS CURRENT BEFORE INSTALLATION OPERATIONS

OX-sign

montagehandleiding / manual

SPECIFICATIES / SPECIFICATIONS

 
zaagmaat / cutting measurement	n.t.b.
input	230 volt ~ 50/60hz
max on MCB	40 max on 16A type-B
inrush current	5,5A - 53 us
power Factor (100% load)	0,90
surge Protection	4/4 kV
garantie / warranty	5 years






UISTRALING / ORIENTATION





INSTALLATIE / INSTALLATION

4 X M6 
4 X M6 

1 X M8 
1 X M8 
2 X M8 

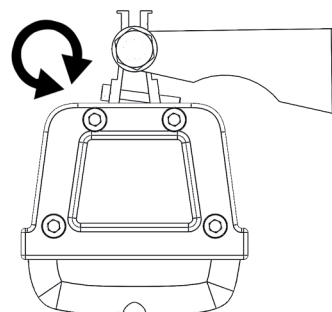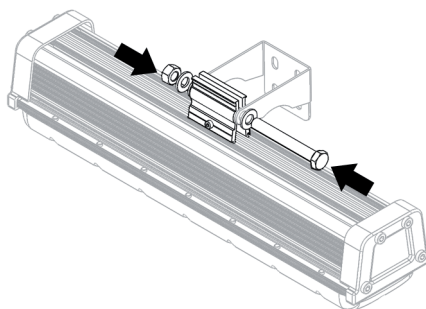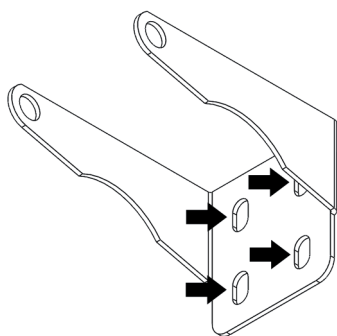

PROTECTION AND SAFETY

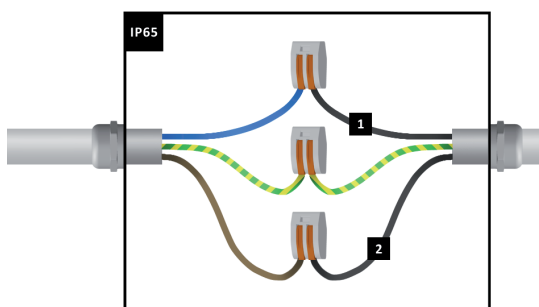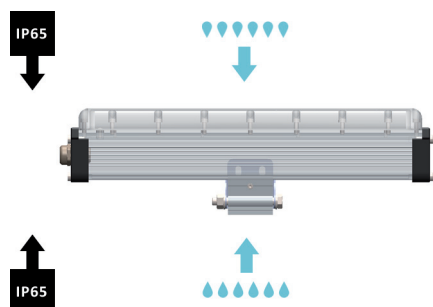

Risk Group 2 :
CAUTION Retinal Blue
Light: Do not stare at
operating lamp, may be
harmful to the eyes !!

